


OPERATION OF REMOTE TOUCH PAD

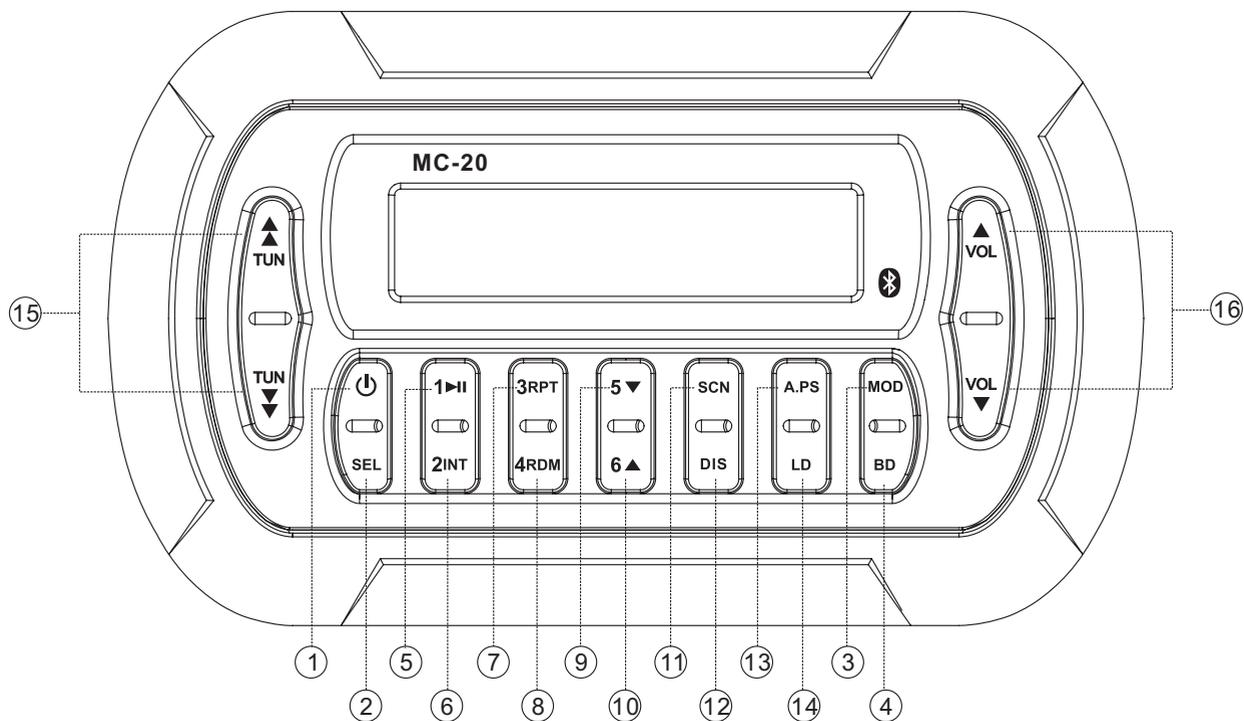

1. POWER ON/OFF, MUTE button

- Press once to turn unit on.
- With the unit on, press once to mute sound output. Press again to resume sound.
- Long press the power button to turn the unit off.

2. SELECT button

- Press SEL button (2) repeatedly to select the desired mode in the following order:
VOL --> BAS --> TRE --> BAL --> FAD.

3. MODE button

- Radio-->USB --> AUX --> BT MUSIC
(USB mode appears only if a USB drive is inserted.)

4. BAND button

- In Radio mode, press BD button (4) to select desired band FM1, FM2, FM3, AM1, AM2.

5. Track play / pause button, radio preset 1 button.

6. Track intro scan button, radio preset 2 button.

7. Track repeat button, radio preset 3 button.

8. Track random play button, radio preset 4 button.

9. Directory Down, Radio preset 5 button.

10. Directory Up, Radio preset 6 button.

11. SCAN button

- In Radio mode, press SCAN (11) button to scan strong stations for a short introduction. At desired station press it again to stop scanning.

12. DISP (display) button

- Press DIS button (12) once to display the time.
See your stereo's operation manual for instructions on setting the time.

13. A.P.S - Auto Preset Scan button

- Press and hold A.P.S button (13) for 2 seconds to search for six strong stations and to automatically store them on buttons 1 - 6.

14. LOUD (loudness) button

- In order to emphasize the bass and the treble at low volume, press the LD (14) button. To turn off loudness, press the LD button again.

15. Tune UP/DOWN button

- Press Tune UP/DOWN button (15) to tune radio, as well as the USB device, or BT Device (where applicable tracks up or down.)

16. Volume UP/DOWN button

- Press VOL UP/DOWN button (16) to increase or decrease the sound level.

Note, for clarification of the above features and information on additional features, consult the operation manual that came with your stereo.