


OPERATION OF REMOTE TOUCH PAD

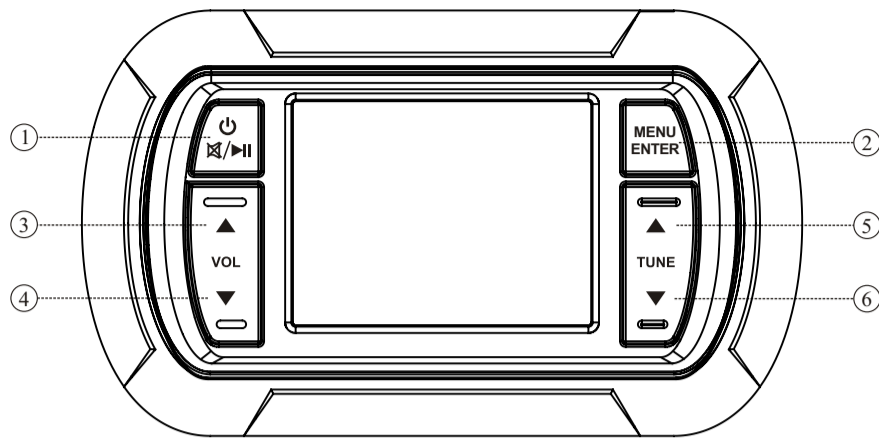

11. POWER, MUTE, PAUSE button

- With unit off, press to power the unit on.
- With the unit on, press and hold for over 2s to power the unit off.
- In Radio, SiriusXM, AUX mode, press to MUTE sound output, press again to resume sound output.
- In USB, BT Music mode, press to PAUSE playback, press again to resume playback.

2. MENU, ENTER button

- In any status, press and hold for 2s to navigate to home display.
- In source playing status, quick press to activate the bottom navigation function. (Note: Bottom navigation function is disabled after 5s without operation.)
- In any selection status, press ENTER to confirm selection.

3. VOLUME Up button

- Simply press it to increase volume level.

4. VOLUME Down button

- Simply press it to decrease volume level.

5. Tune Up button

- In playing status, press to select the next station, channel, or track.
- In bottom navigation mode, press to move highlight upward/over.

6. Tune Down button

- In playing status, press to select the previous station, channel, or track.
- In bottom navigation mode, press to move highlight downward/over.

Note, for clarification of the above features and information on additional features, consult the operation manual that accompanied the stereo.